

HOW TO TEST YOUR HEAT LAMP

- 1.) Unplug heat lamp cord from the EasyHeat Thermostat
- 2.) Unplug the EasyHeat Thermostat from the outlet or cord.
- 3.) Plug heat lamp cord into the outlet or cord that the EasyHeat Thermostat was plugged into.
- 4.) The heat lamp should come on, if it doesn't check to make sure that the switch (if equipped) at the base of the fixture is turned on. Please note that it is important to leave the switch in the on position. If the bulb still does not come on, replace the bulb with 125 watt BR40 lamp bulb or a bulb equivalent to what was originally installed.
- 5.) Unplug the heat lamp from the outlet or cord.
- 6.) Plug the EasyHeat Thermostat back into the outlet or cord.
- 7.) Plug the heat lamp cord into the EasyHeat Thermostat.

The EasyHeat Thermostat will automatically activate the heat lamp when the temperature inside the shelter reaches 38 degrees. It will automatically shut off once the temperature has reached 50 degrees.



Heat Lamp



EasyHeat Thermostat



Bulb